



# WET POUR GRAPHICS

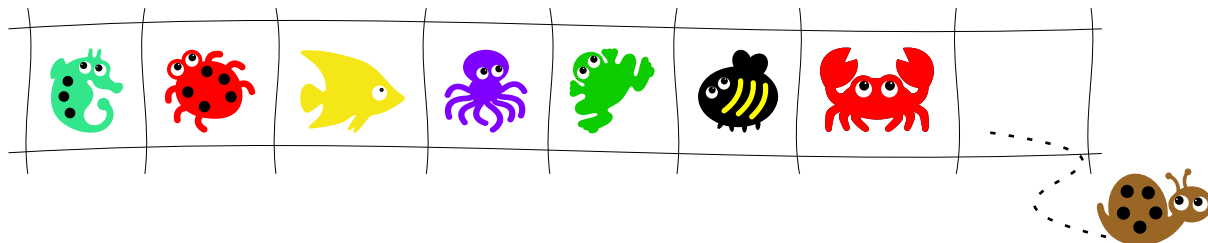

## Installation Guide


**1. Roller the area of your base coat flat and level where your graphics is going to sit.**

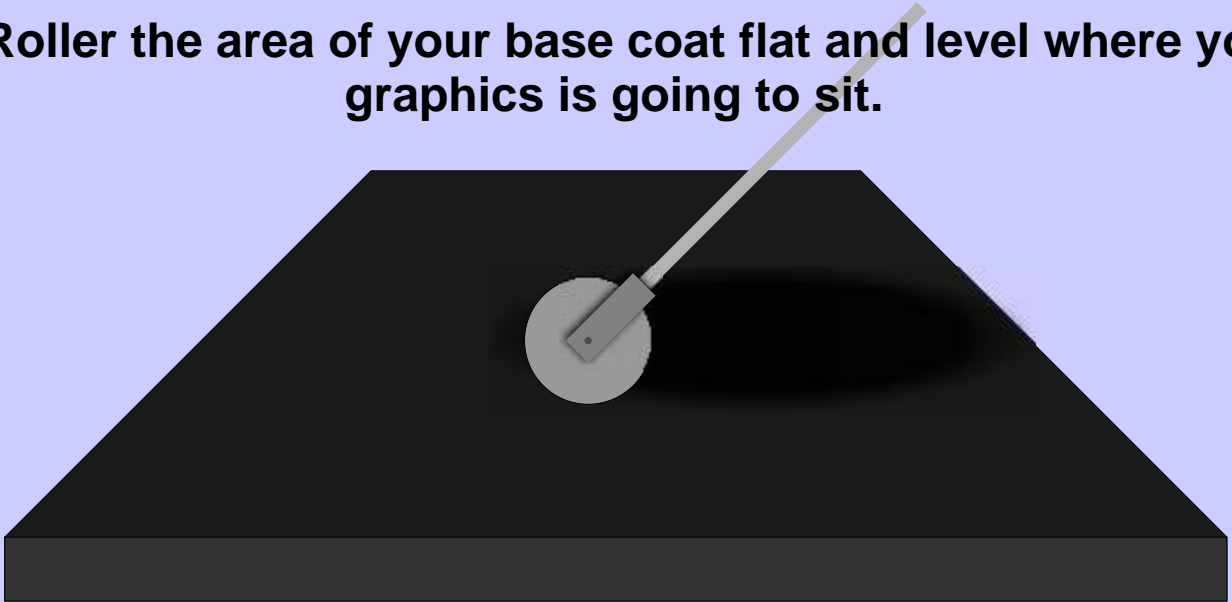

**2. To act as a bonding agent apply primer to the base coat & around the edges and underside of your graphic prior to placing it in si-tu.**



**3. Screed and compress your finish coat around your graphic**

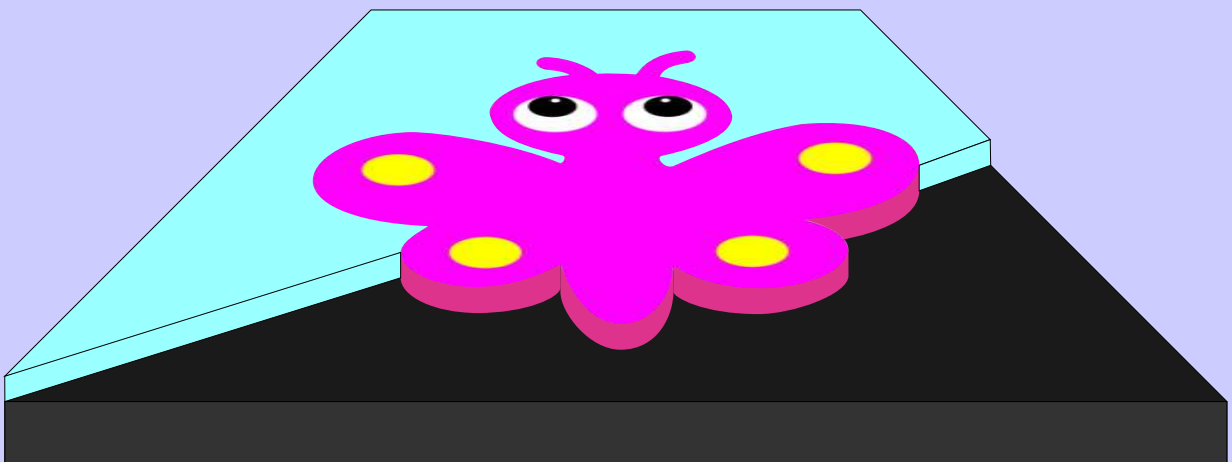

**4. Job done**